


# NPC – External Joint Wrap

## Installation Instructions

1. Thoroughly clean the concrete surface with a wire brush to remove all loose dirt particles and deleterious material.
2. Peel back the white release film to expose approximately 12 inches of the adhesive wrap material.
3. Center the exposed adhesive material over the joint and apply to the joint by using moderate hand pressure to smooth out the material onto the substrate.
4. Apply the remaining amount of material needed to cover the joint by pulling the release film with one hand while smoothing out adhesive wrap with the other. Make sure that the joint is completely covered and that the wrap has good contact with the underlying concrete surface.

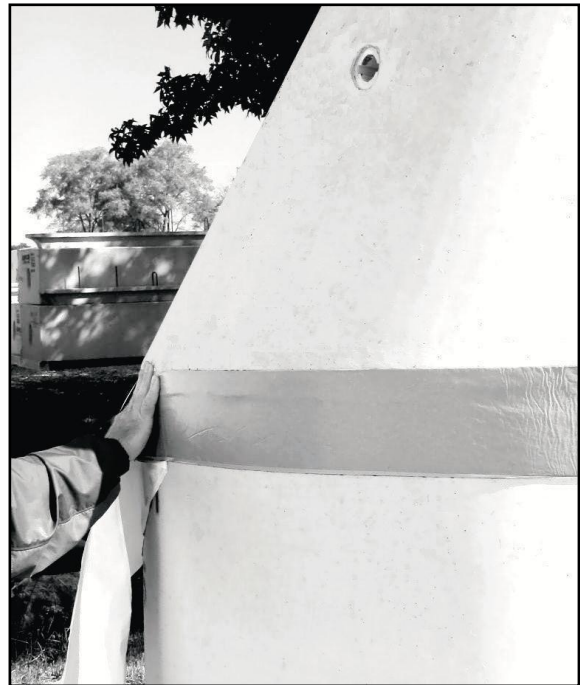

5. If one roll does not complete the required coverage, then continue with a new roll by overlapping the ends approximately 4 inches.
6. The wrap may be cut to its required length by using scissors or a knife.

Bidco, Inc.

St. Joe Drive & Lewis Street, P.O. Box M, Park Hills, MO 63601 U.S.A.  
Tel: 573-431-1619 800-442-0141 Fax: 573-431-1035 [www.trelleborg.com/npc](http://www.trelleborg.com/npc)