


NPC – Waterstop Grouting Ring



Installation Instructions:

1. Fit the Waterstop Grouting Ring around the outside diameter of the pipe. Position it so that the ring will be in the middle of the structure's wall thickness.
2. Install the stainless steel pipe clamps around the groove of the grouting ring and tighten to 60 inch pounds using a T-Handle Torque Wrench (p/n 80090).
3. The pipe is now ready to be mortared or cast into the concrete structure. A high-strength, non-shrinking grout is recommended for mortaring (or brick and mortaring) pipe connections in place.

Waterstop Installed on Corrugated Pipe

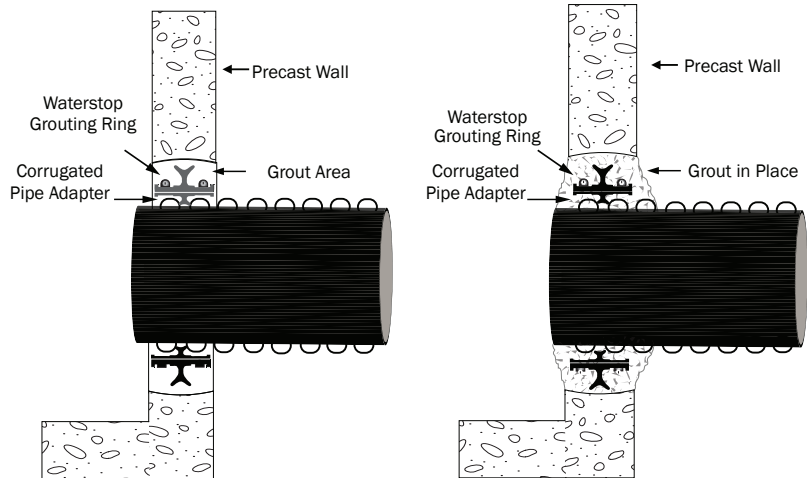

Waterstop Installed on Smooth-Wall Pipe

